
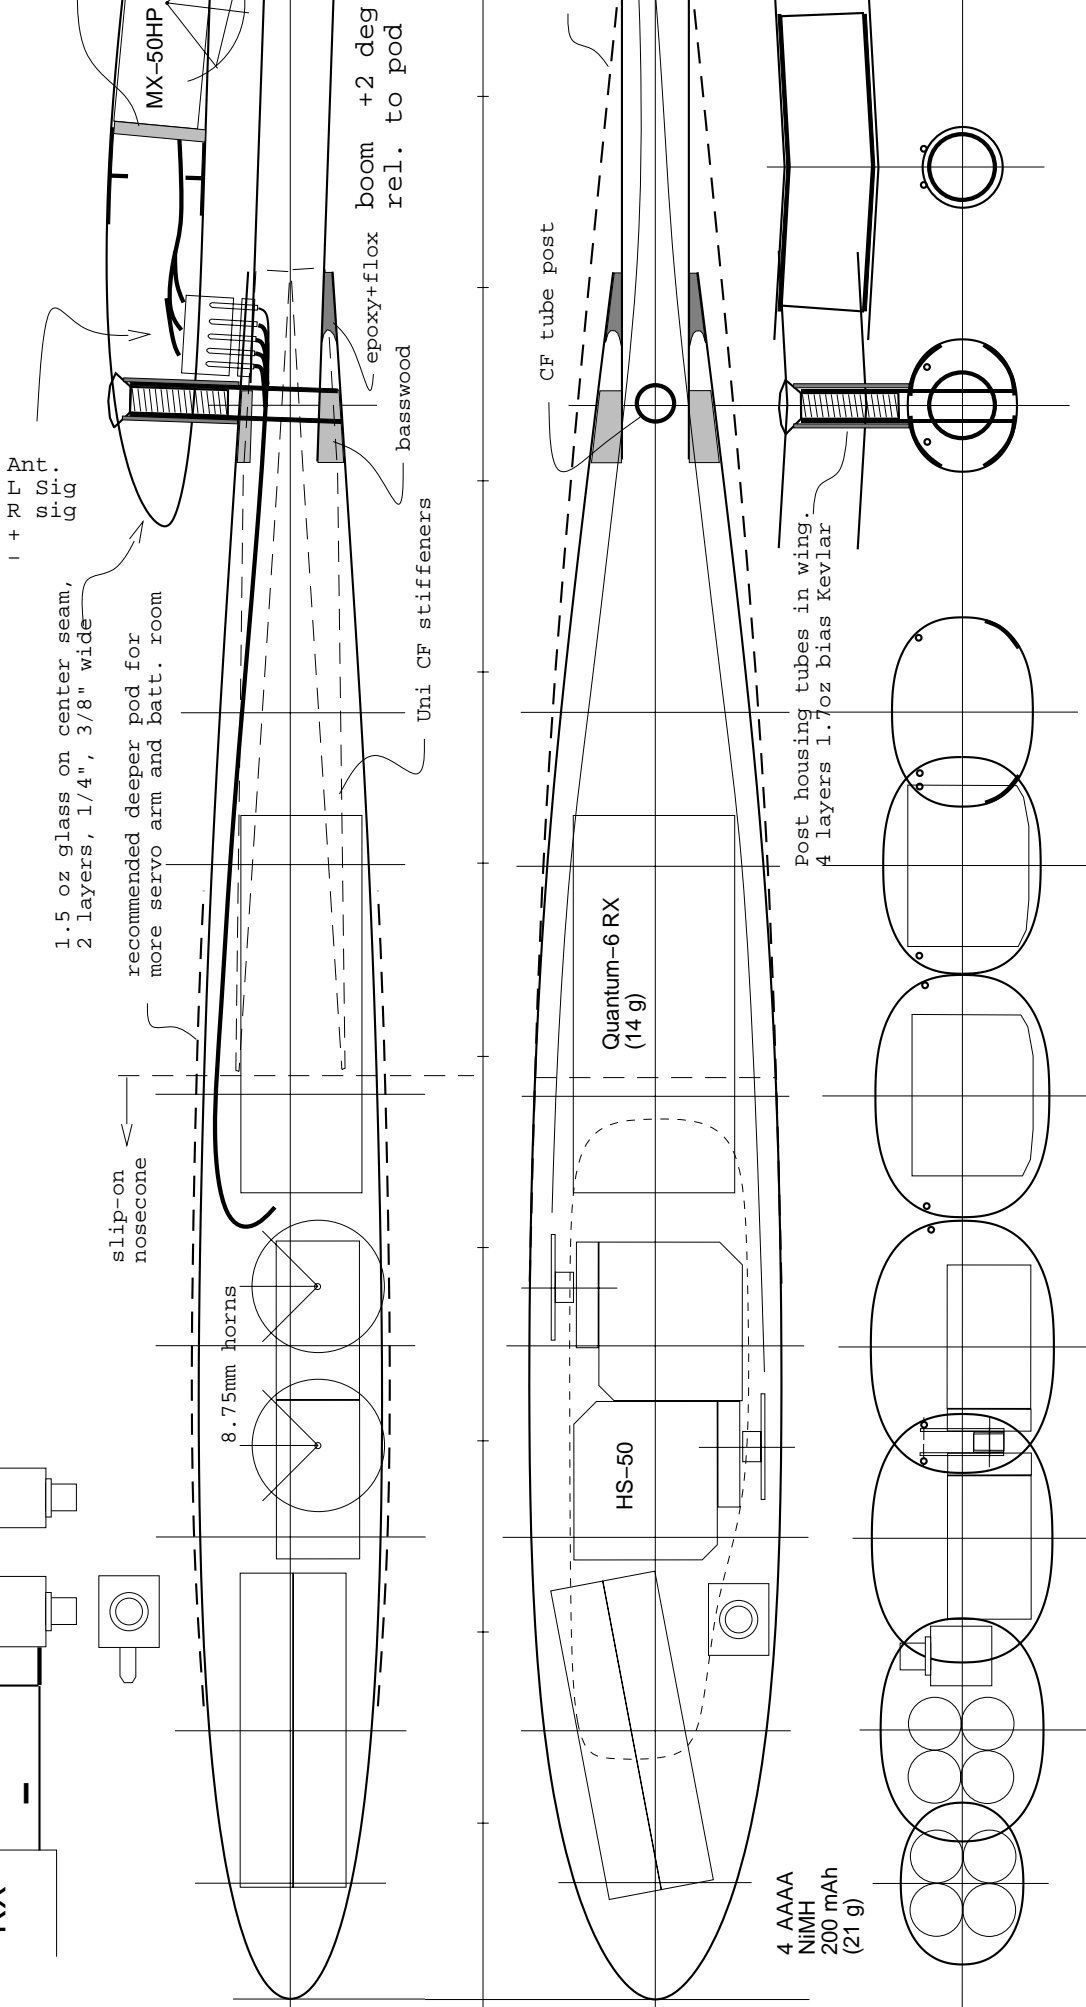





SuperGee Fuselage Pod

MD 02 May 02

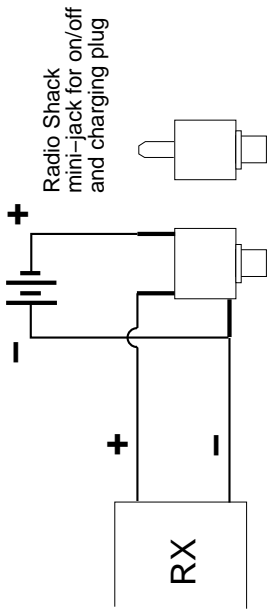

Fine 1K tow p
Use many more
Keep tow tight
Wet out durin

Pod

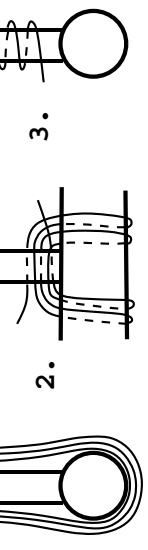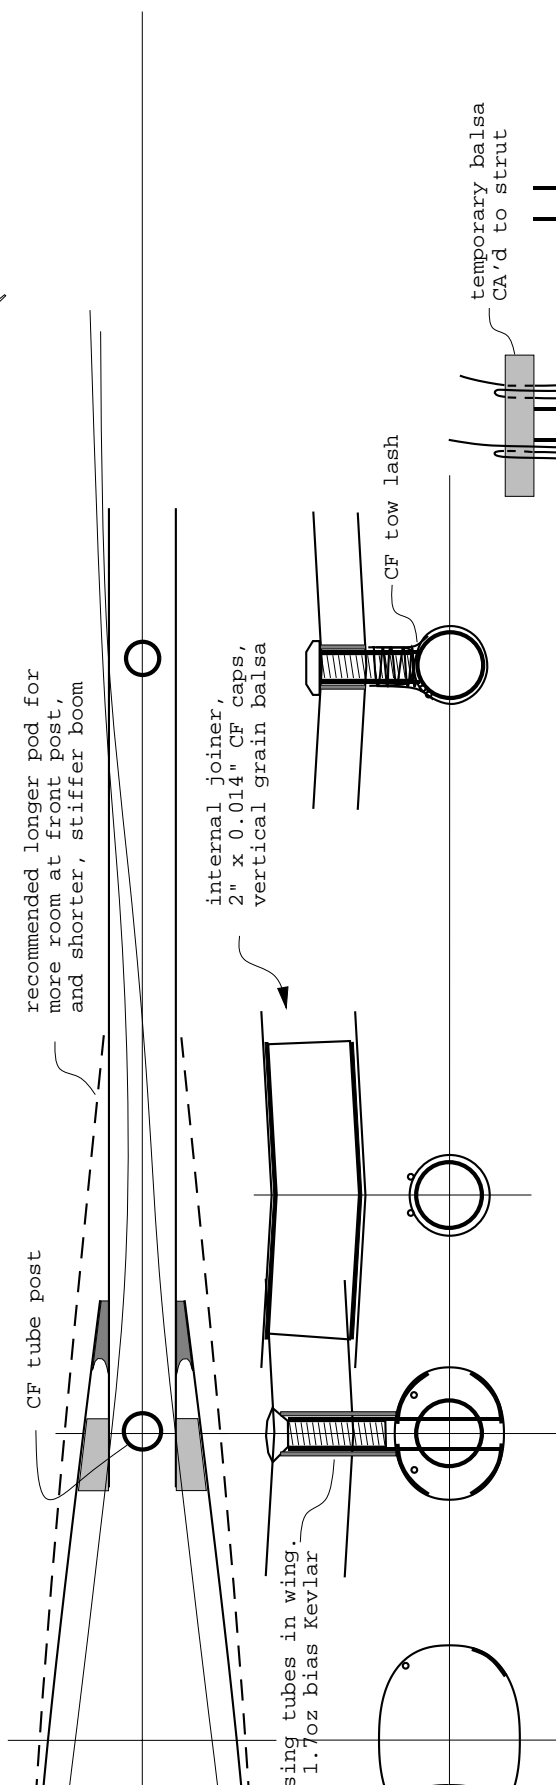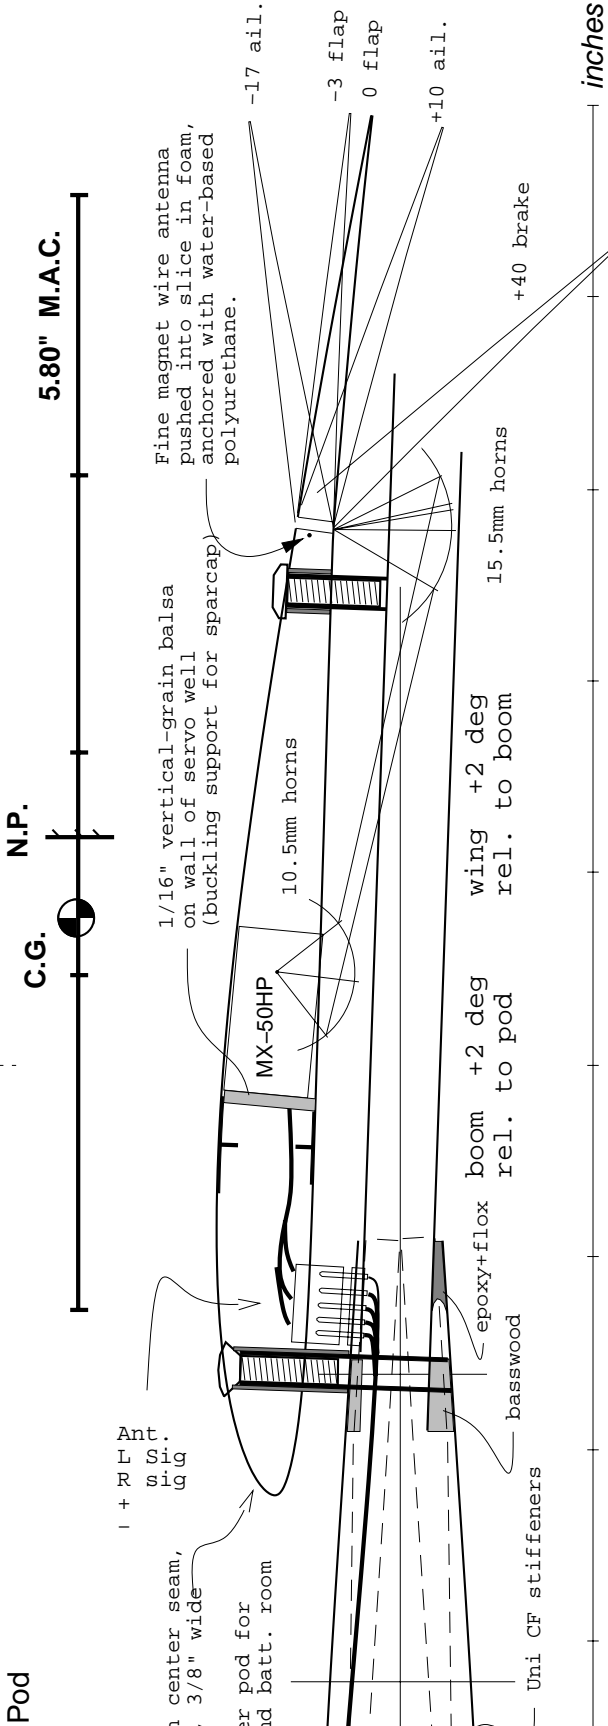

Fine 1K tow pulled from 3oz CF cloth works best. **1.**
 Use many more tow wraps than shown in sketches.
 Keep tow tight throughout wrapping process.
 Wet out during wrapping process (not afterwards).