



1/2 mil waxed Mylar around joiner rod, applied with vaseline

put overlap on bottom as shown

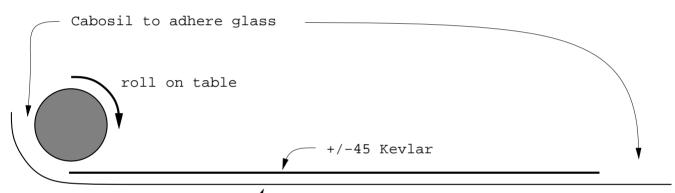

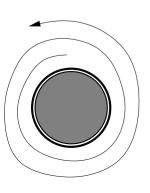

Spiral wrap with 1" wide 1 mil polyethylene strip (note direction)

0/90 0.75 oz glass, 1/2" bigger than Kevlar

on all four sides

Spiral wrap tightly with stretchy tape (masking, electrical...) for compaction, or use vacuum bag

When cured, slide everything off on vaseline layer, and twist out the mylar (that's why the wax was used)